
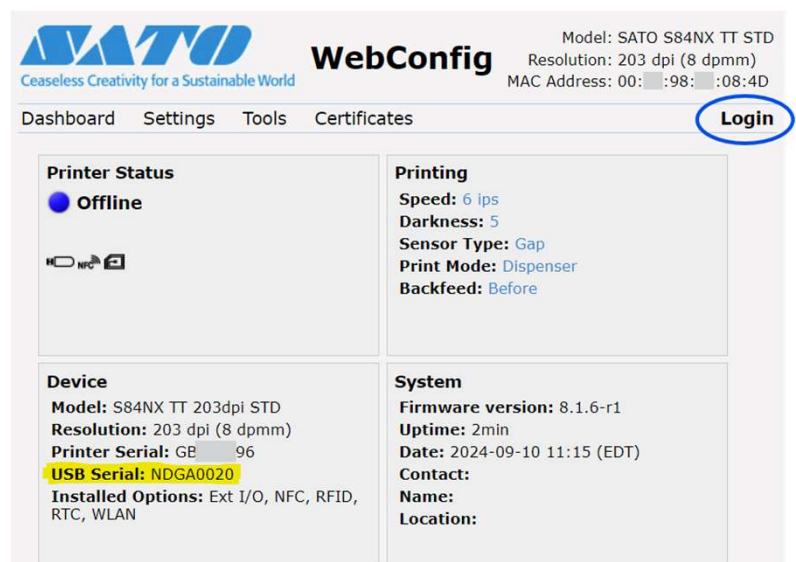


## TT-003 Login to SATO WebConfig


## S84NX/S86NX

1. To Login to the SATO WebConfig interface, open a web browser on a device that is on the same network as the Printer. In the web address bar, type in the IP address of the printer and this will take you to the WebConfig Dashboard Screen. You may see a warning screen that the connection is not private. Click the advanced option and click Proceed (unsafe). From the Dashboard screen, click “Login” in the upper right-hand corner.

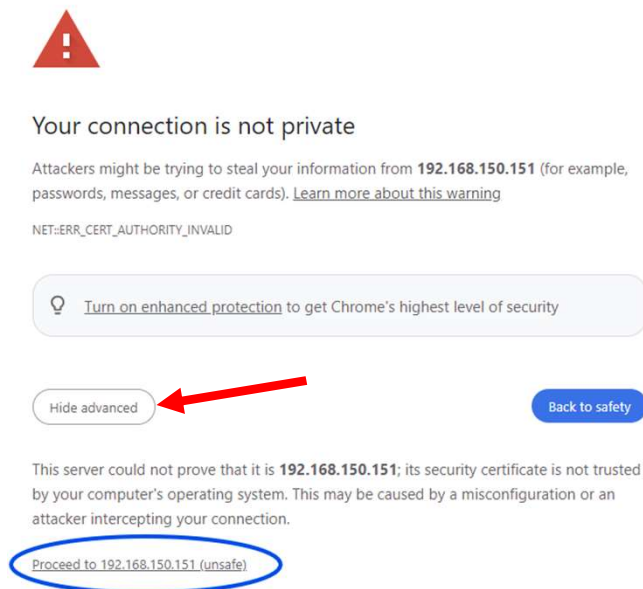

2. For the user, click the drop-down menu and select “Service”.
3. The password is: “USB Serial #” + “service” *including the plus symbol*

For this example, the password is: **NDGA0020+service**

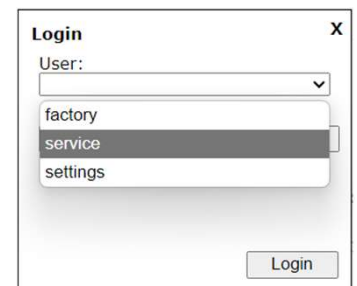

4. The NX print engines also have a **LOCAL REMOTE** interface. Similar to the WebConfig, type in the web address bar the printers IP address + “/local”. For example, 192.168.150.151/local. You may see a warning screen in which you can click Advanced → Proceed (unsafe).
5. You will be prompted to Login:

- Username: **level1**
- Password: “USB Serial #” + “user”  
Example: **NDGA0020+user**

