


TT-004 Password Protection

S84NX/S86NX

After final optimization, it is common for users to Enable a Password to prevent any non-authorized users from being able to change settings.

1. With the printer Offline, enter the Settings Menu and select “System”. Then use the down arrow to select “Password”

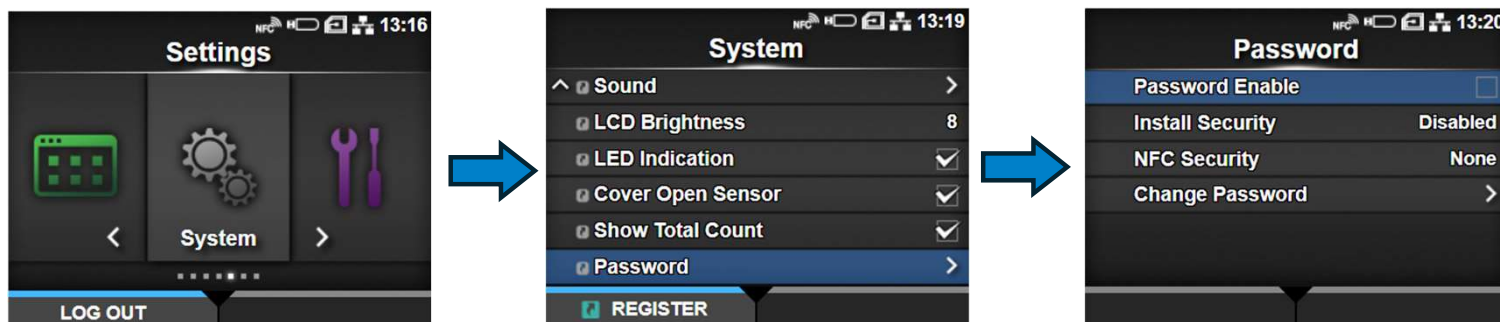


2. **Password Enable** – Requires the user to enter the password before you can enter the Settings Menu. User will still have access to items in the Shortcut Menu. Be sure to use the left soft key to log out after making changes in settings.

The default password is: “USB Serial #” + “user” including the plus symbol.

For example: NDGA0020+user

Note: USB Serial # can be found in the Dashboard page of the WebConfig, Information Menu, or by printing out the Configure List from the Test Print menu.

3. **Change Password** – Choose this option if you want to change from the default password. Passwords can be 4 to 32 characters, alphanumeric, symbols, and case sensitive. Select “level1” as the user level for changing your password. The Admin and Manager level users are strictly for SATO authorized personnel use.

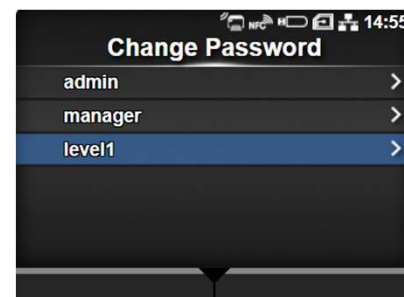

4. **Install Security** – Enabling will require a password before the user can download a package file. You can choose to require this only when a USB stick is inserted to the printer, or you can choose always which will require a password before any package file can be downloaded, for example from the WebConfig interface or the SATO All-In-One tool.
5. **NFC Security** – Set whether to show a confirmation prompt or require a password before allowing NFC functionality from an Android device. To use the NFC Security function, the settings must be written from the Android device while the product is powered off. The confirmation message or password input screen is shown when the product is powered on.