



Setup of USB port for GY4 Series


1 Attach USB Cable




2 Power Printer On




3 Take OFFLINE

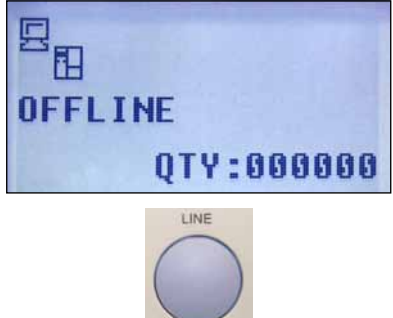


4 Go to ONLINE MODE




5 Scroll to INTERFACE Mode

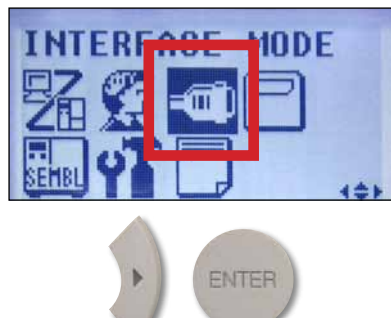


6 Select Interface Setting

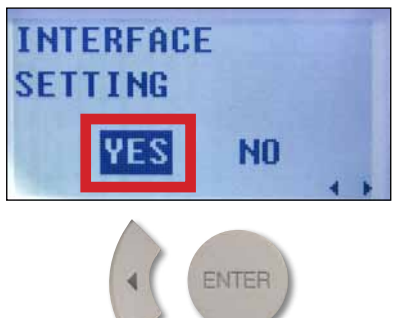


7 Select MAIN




8 Select USB




9 Press Function (2x)

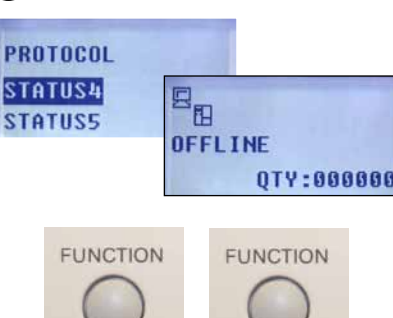

10 Take ONLINE



11 Cycle Printer Power

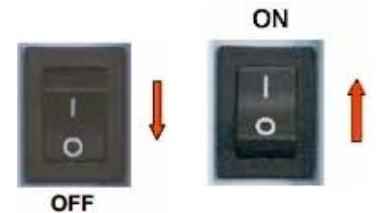


SATO America, Inc. • 10350-A Nations Ford Road, Charlotte, NC 28273 • Ph: (704) 644-1650 • E-mail: satosales@satoamerica.com

www.satoamerica.com


© 2011 SATO America, Inc. All rights reserved. Rev. A

Setup of LAN port for GY4 Series


1 Attach LAN Cable and Power Printer On




2 Take OFFLINE

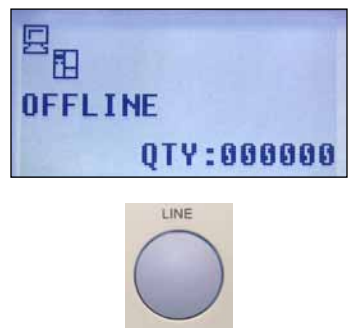


3 Go to ONLINE MODE




4 Scroll to IF Mode

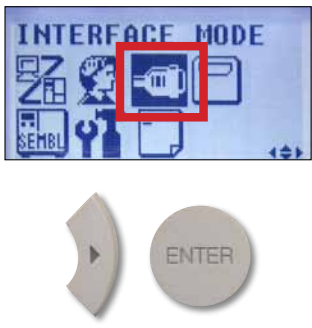


5 Select IF Setting

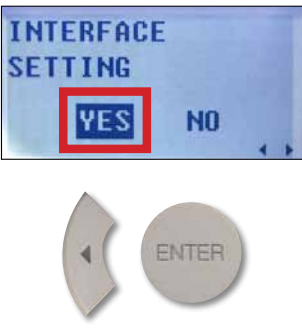


6 Select Main



7 Select LAN




8 Select MANUAL




For DHCP. Please select DHCP and go to Step 11


9 Select DISABLE




10 Set IP, SUBNET, GATEWAY

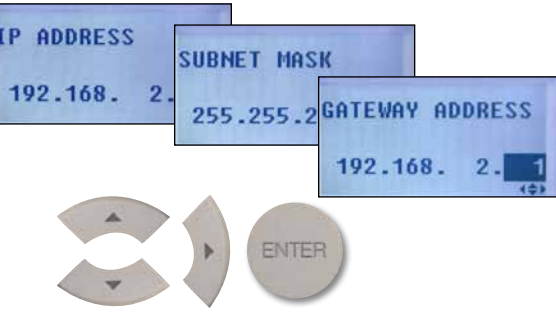

11 Press Function (2x)

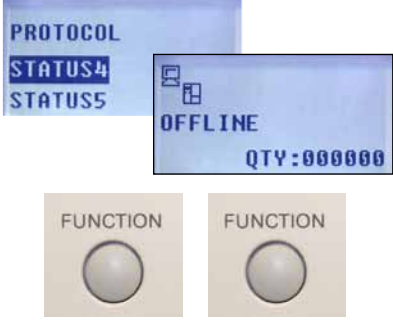

12 Take ONLINE



13 Cycle Printer Power

